

Seamless Security
Modern Convenience.

Smart Handle Lock


User's Guide

Read the instructions and cautions carefully before using the smart lock and keep it for future reference.


What's included ?

After the product is unpacked, check whether the following accessories are complete.


A-Front Handle

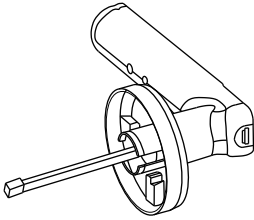


B-Rear Handle

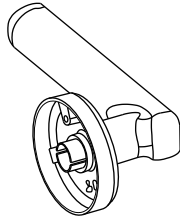


C-Mortise

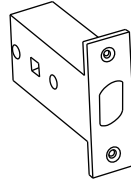


D-Strike Plate And Strike Box

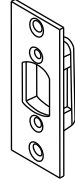

E-Keys

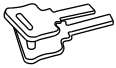

F-Square Bar

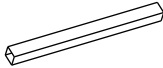

G-Connecting Pillar



H-Connecting Screw




I-Tapping Screw



Door Lock Installation

- Precision-drill mounting holes on the door in accordance with the prescribed locations for the mortise, ensuring meticulous alignment.
- Employ tapping screws (I) to securely affix the mortise (C), strike plate, and strike box (D) to the door at the specified drilled positions.
- Fasten connecting pillar (G) onto the front handle panel (A).
- Thread the square bar (F) through the power cord into the square hole on the front handle (A).
- Install the front handle assembly with the accessories on the door, the square bar (F) with the cable passing through the mortise.
- Loosen the cover screw (B-1) on the rear handle (B) and remove the battery compartment from the back cover (B-2).
- Install the rear handle (B) on the door, ensuring the square bar and cable from the front handle pass through the rear handle's square hole.
- Secure the rear handle and front handle together using connecting screws (H) that link the front and rear panels.
- Connect the cable connector into the back cover (B-2).
- Install 4 pieces of AAA alkaline batteries.

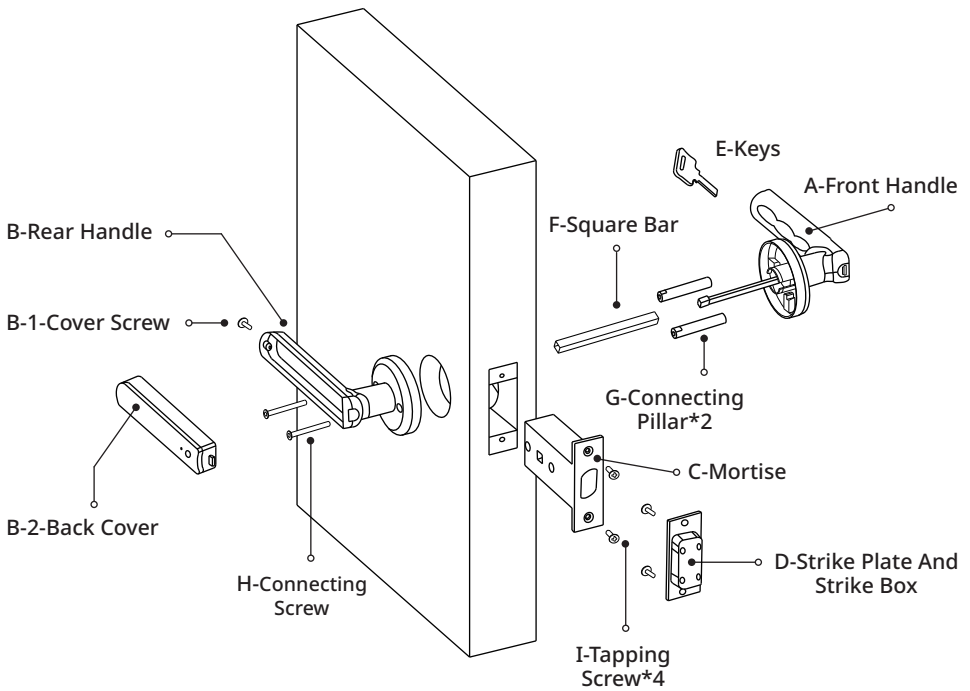

Settings

1.Adding the users

The first 3 fingerprint users are administrators, and the fourth or above are ordinary users, the fingerprint capacity is 50.

A. Add user for the first time:

Insert a paper clip into the hole on the rear handle to press the reset button once -- the blue light flashes -- press your finger on the sensor 6 times until the green light stays on. It indicates successful entering and automatic exit setting after completion.

B. Add for the second time:

Insert a paper clip into the hole on the rear handle to press the reset button once -- the blue light flashes, and verify the administrator once -- the blue light stays on when the verification is successful. Add the new fingerprint user by pressing your finger on the sensor 6 times until the green light is always on.

2.Delete users (Factory Recovery)

Insert a paper clip into the hole on the rear handle to press the reset button for 5 seconds, release after the red light flashes with a "Di" sound. Later the green light is on indicating successful factory recovery.

Instructions For Use

1.Unlocking

Authentication Successful: The green indicator light is on with one “Di” sound.

Authentication Failed: The red indicator light is on with two “Di” sound.

2.Automatic locking

- Three seconds after unlocking, it will automatically lock.

Turn on the deadbolt mode

- Press the button on the handle cover twice, the green light turns on with a “Di” sound, the lock enters the deadbolt mode. Only administrators can open the door.

Turn off the deadbolt mode

- Press the button on the handle cover twice in deadbolt mode, the green light is on for about 2 seconds with a longer “Di” sound, the lock exits the deadbolt mode.
- Open the door with administrators’ fingerprints can also exit the deadbolt mode.

3.Normally open mode

Turn on the normally open mode

- Press the button on the handle cover for 5 seconds, the pink light flashes. Release the button, the green light is on with a “Di” sound indicating successful activation.

Turn off the normally open mode

- The normally open mode can be turned off when the fingerprint is verified successfully.
- Press the button on the handle cover for 5 seconds, the pink light flashes. Release the button, the green light is on with a “Di” sound indicating successful deactivation.

Specifications

| Spec | Details |
|-------------------|-------------------|
| Product Name | Smart Handle Lock |
| Product Model | L408 |
| Power Supply | AAA Battery |
| Fingerprint Users | 50 sets |